


# Pancake slip ring installation instruction


Pancake slip ring is a general terms, which is applied to equipment that has height limitation and can meet the special requirement about the special space.



Installation diagram ( 2D ) :

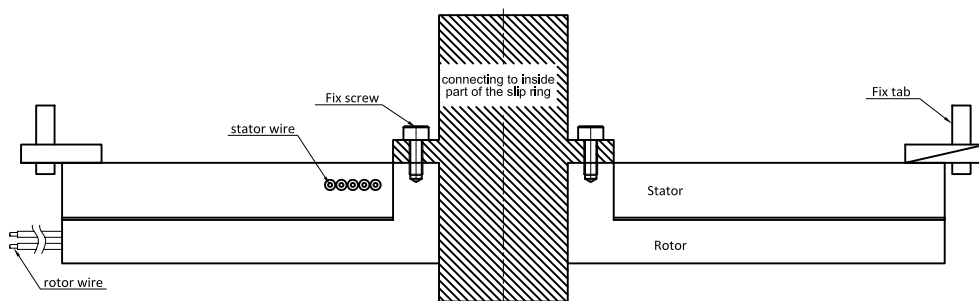

Installation diagram ( 3D ) :

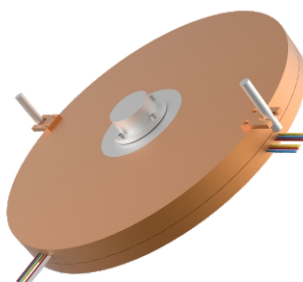

## Installation Instruction:

Pancake slip ring has two relative rotating slip rings, while installing, first fix the rotor part, and then insert the anti-rotating stick into anti-rotating tab, make sure a certain degree of freedom. Don't force to fix the anti-rotating tab, otherwise it may cause slip ring damage or reduce the working life.

### Notes:

- ① Protecting the leads to avoid wire insulation damaged and affects the product quality when installing.
- ② Slip ring is a precision electrical component; it should work in a dry, less dust environment. It must add some protection if working in harsh environment.
- ③ Ensure the screw is tight.
- ④ Stator leads keep away from axis and rotor leads away from fix part to avoid scratching wires.
- ⑤ Stator and rotor part can be exchange according to the demands.